

5-3/4" LED HEADLIGHT INSTALLATION



1. Loosen headlight retainer-ring bolt, then remove retainer-ring from headlight housing. Keep retainer-ring.



2. Disconnect old headlight bulb from H4 connector. Remove old headlight assembly from headlight housing.



3. Slip mounting ring over back of 5-3/4" LED headlight. Note the single tab on the left side of the light. Reconnect H4 plug and place headlight into housing.



4. Secure headlight with retainer-ring. Tighten bottom bolt and ensure proper fit. Test high and low beam functions prior to riding.