

Mounting conversion bracket to motorcycle frame:

- Remove two innermost fender studs (1). Remove rear passenger footpeg (2). Remove lower front support (for models with heritage saddlebags only).

- Align conversion bracket and secure using existing fender studs (1). Secure lower support by re-attaching passing footpeg overtop (2). If sissybar docking hardware present, simply re-thread overtop of conversion bracket mounts.

Attaching touring saddlebags to conversion brackets:

- Affix two U-Bracket to bag support using Flange Bolt & Washer and Nut. (figure 2)

- Insert rubber grommet into saddlebag side support and insert bottom cushions, placing bag on bottom support.

- Use Hand Turn Fastener and Flange Washer to Secure Bag to U-bracket (figure 3)

PART LIST		
Part #	Description	Quantity
1	Main Bracket Assembly	2
2	U-Bracket	4
3	Hand Turn Fastener 5/16"	4
4	Flange Washer (5/16" ID)	4
5	Washer (1/4" ID)	4
6	Nut 1/4" (Serrated Flange)	4
7	1/4"-20 x 3/4" Flange Bolt	4

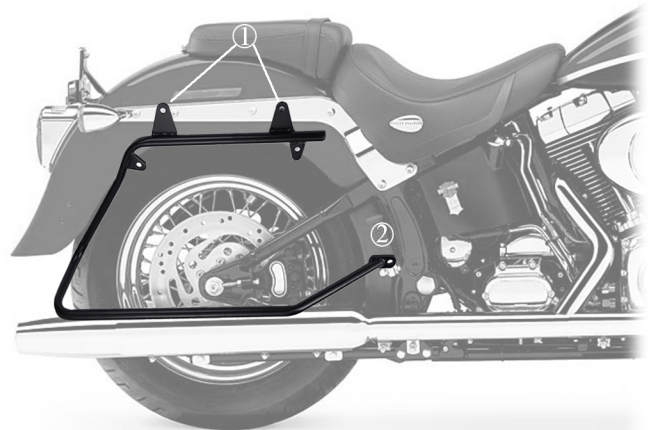


figure 1. mounting bracket to bike frame



figure 2. attaching U-bracket rear and front



figure 3. attaching saddlebags to bracket